

# CRISTALstop® injector for 2 in 1 probe holder

Limit the crystallization in the chlorine injection point and increase the peristaltic pump lifetime.



- The CRISTALstop® injector fit on the AVADY 2 in 1 probe holder (ref:AYFA00011).

Our tests with partners show us on some site that usually have crystallization after 3 weeks, the CRISTALstop® injector installation repel this delay to 3 months.



AYAC100339

- CRISTALstop® injector maintain kit:


- spare valve, if this one no longer closes by itself because of its usury.
- Available in pack of 3.



AYAC100502

## Associated product:

### 2 en 1 probe holder

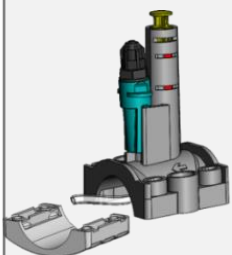

- A single location for measurement and injection.
- Sensor fully protected by the sensor holder tube.
- Compatible with DN50 and DN63 pipes.
- A wintering plug is provided to replace the sensor in the sensor holder.
- Horizontal or vertical assembly.

- This probe holder is supplied with those devices:
  - POOLeasy®
  - PROpilot®
  - PROpilot Duo®
  - Turboxy Duo®



AYFA00011

